

ROSIE LI



Laurel 01 Wallmount Installation Instructions

SAFETY

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED

BE SURE THE ELECTRICITY TO THE WIRES YOU ARE WORKING ON IS SHUT OFF; EITHER THE FUSE IS REMOVED OR THE CIRCUIT BREAKER IS TURNED OFF. TURNING THE POWER OFF USING THE LIGHT SWITCH IS NOT SUFFICIENT TO PREVENT ELECTRICAL SHOCK.

WARNING! – TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR PERSONAL INJURY:

Turn off/unplug lamp and allow to cool before replacing bulb.

Do not look directly at lighted bulb.


Keep materials that burn easily away from lighted bulb.

Improper use of the bulbs can result in shattering, causing injury and equipment damage.

NOTE: The important safeguards and instructions appearing in this manual are not meant to cover all possible conditions or situations that may occur. It must be understood that common sense, caution, and care, are factors which cannot be built into any product. These factors must be supplied by the person(s) installing this unit.

INSTALLATION

- 1) Ensure power is disconnected before beginning
- 2) Locate set screw on the underside of the armband, between the back of the leaf and the backplate. Release set screw and remove crossbar. Notice how the wires run through the crossbar.
- 3) When properly installed the set screw will be captured in the crossbar's groove. If the junction box is not flush to the wall, adjust the nipple on the crossbar so that the groove is in the correct position to be captured by the set screw. Affix crossbar assembly with provided screws.
- 4) Connect the NEUTRAL (white) fixture wire to the NEUTRAL (white) wire of the supply circuit and secure.
- 5) Connect the HOT (black) fixture wire to the HOT (black) wire of the supply circuit and secure.
- 6) Place wiring back into the junction box.
- 7) Slide the sconce onto the crossbar. Align the fixture vertically and tighten the set screw to firmly lock in position. If the fixture's backplate is not flush to the wall, remove sconce and adjust the position of the nipple on the crossbar.

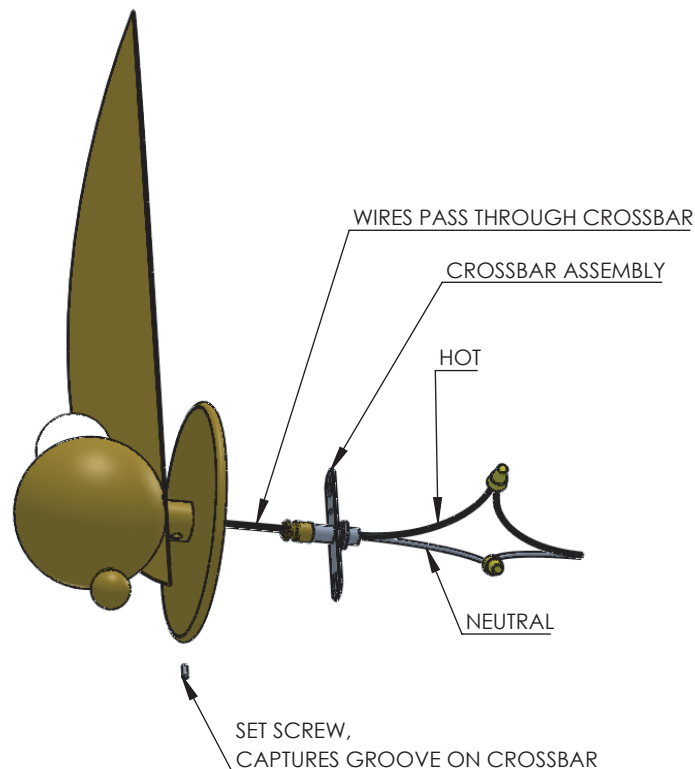

CLEANING

Use only soft cloth to dust and clean fixture. Never use chemicals or abrasive cleaners as it may damage glass.