


# ROSIE LI

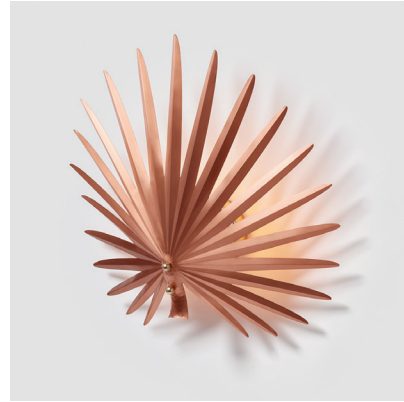

Inez 01 Wallmount Installation Instructions

---

## **SAFETY**

**THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED**

**BE SURE THE ELECTRICITY TO THE WIRES YOU ARE WORKING ON IS SHUT OFF; EITHER THE FUSE IS REMOVED OR THE CIRCUIT BREAKER IS TURNED OFF. TURNING THE POWER OFF USING THE LIGHT SWITCH IS NOT SUFFICIENT TO PREVENT ELECTRICAL SHOCK.**

**WARNING! – TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR PERSONAL INJURY:**

**Turn off/unplug lamp and allow to cool before replacing bulb.**

**Do not look directly at lighted bulb.**

**Keep materials that burn easily away from lighted bulb.**

**Improper use of the bulbs can result in shattering, causing injury and equipment damage.**

**NOTE: The important safeguards and instructions appearing in this manual are not meant to cover all possible conditions or situations that may occur. It must be understood that common sense, caution, and care, are factors which cannot be built into any product. These factors must be supplied by the person(s) installing this unit.**


**Please read through all instructions carefully before attempting fixture installation.**

\*\*\*Leaf and glass parts to be applied to fixture AFTER wall mount installation.\*\*\*

\*\*\*Always use gloves when handling fixture.\*\*\*

## Installation


- 1) Ensure power is disconnected before beginning installation.
- 2) Install crossbar with threaded nipple to junction box.
- 3) Prior to wiring, place sconce body backplate onto threaded nipple to ensure correct depth. If threaded nipple is too short or too long, adjust at crossbar junction.
- 4) Connect the NEUTRAL (white) fixture wire to the NEUTRAL (white) wire of the supply circuit and secure.
- 5) Connect the HOT (black) fixture wire to the HOT (black) wire of the supply circuit and secure.
- 6) Place wiring back into junction box.
- 7) Slip sconce body backplate over threaded nipple and secure fixture firmly with half-round finial hardware.

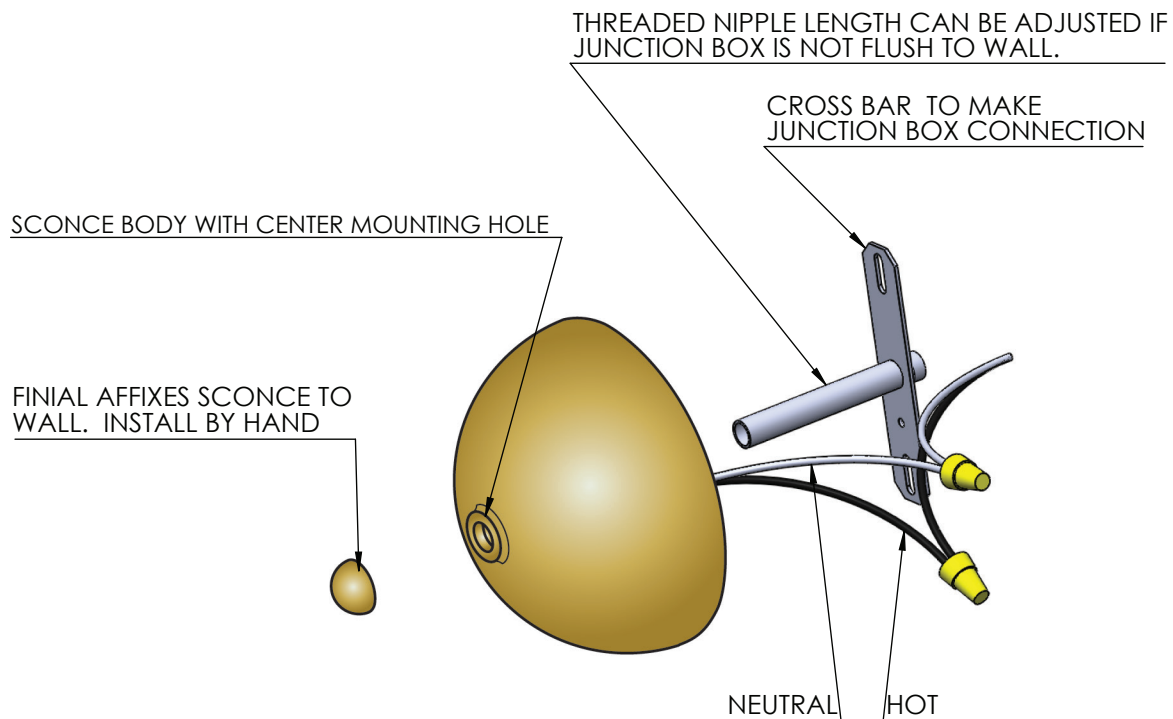

- 8) Remove two 5/8" balls from sconce body. Handle with provided gloves.
- 9) Carefully unwrap Palm Leaf diffuser and install. Two hands are required to handle; DO NOT hold by stem portion only. Use provided gloves when handling.
- 10) Install light bulb.



**Please handle with two hands.  
DO NOT hold by stem portion only.**

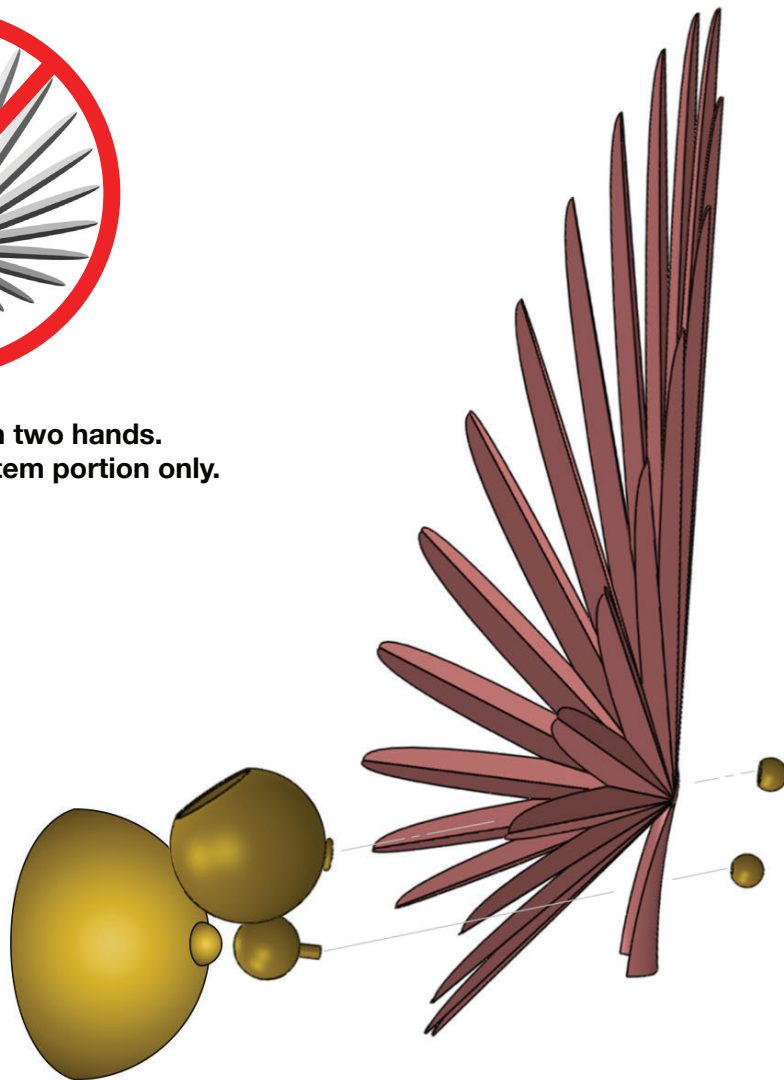

## **Cleaning**

Use only soft, dry cloth to dust and clean fixture. Never use chemicals or abrasive cleaners as it may damage metal and glass finish.